
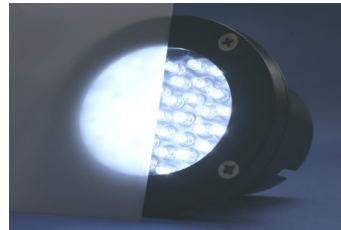


## Rules of cleaning Light Shaping Diffuser <sup>®</sup>

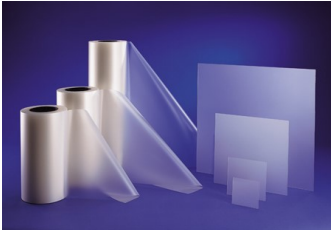

The Light shaping diffuser should be considered an optical element that requires attentive handling. There are several ways to clean the diffuser depending on the severity of the contamination. The first method employed should consist of a clean mid-pressure air spray. This will clean the surface of the diffuser of any small particles. If this is unsuccessful, drag wipe the diffuser using optical lens paper or cheesecloth moistened with either optical grade methanol or deionized water. Do not use acetone due to its discoloration effect on the diffuser, and do not submerge the diffuser or scrub it.

OPTROVISION GmbH	Fon: +49 (0)89 512 667-84	Postbank
Augustenstrasse 13	Fax: +49 (0)89 512 667-85	IBAN: DE52 6001 0070 0043 1577 03
80333 München		BIC: PBNKDEFF
Geschäftsführer: Rainer Jung	Mail: <a href="mailto:info@optrovision.de">info@optrovision.de</a>	
Amtsgericht München, HRB 225527	<a href="http://www.optrovision.de">www.optrovision.de</a>	USt.-IdNr. DE 306810398